



# TREE COMMANDER™

REMOTE CONTROL



**(••)** LED blinks **RED** when not connected to machine but has been powered on.

**(••)** LED blinks **AMBER** when connected to machine but not yet enabled.


**(••)** LED blinks **GREEN** when connected to machine and has been enabled.



**Low Battery Indicator** blinks to let you know its time to replace.

**Shuts** the engine off.

**Stops** the feed rollers.




**Reverses** the feed rollers.





**Activates** the feed rollers.




**Press to Reset** the Lower Feed Stop Bar and Press and Hold to override the Bar.




**Remote On/Off** button.